

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Power window	<ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse	P. 62
Power back door	<ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse	P. 32
Moon roof (Multi-panel type only)	<ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse	P. 65
Engine oil maintenance data	After changing engine oil	P. 320
Tire pressure warning system	<ul style="list-style-type: none">• When changing the tire inflation pressure by changing traveling speed or load weight, etc.• When changing the tire size.	P. 332

